
Joining rail alignment fixture


The joining rail alignment fixture AT / AK is used during installation of joined rails in order to precisely align the rails with each other. Joining rail alignment fixture AT for joined T-and U-rails. Joining rail alignment fixture AK for K-rails.

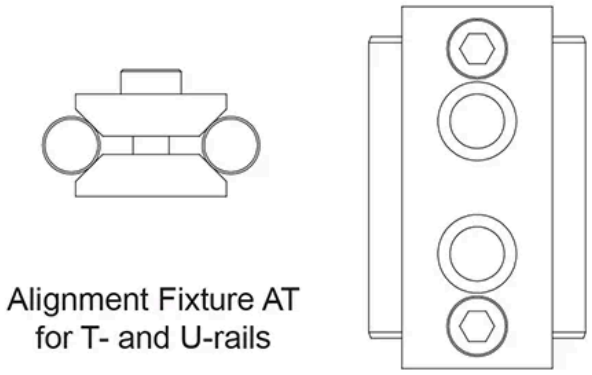

Every care has been taken to ensure the accuracy of the information in this document, but we take no liability for any errors or omissions. We reserve the right to make changes without prior notice.

General Data



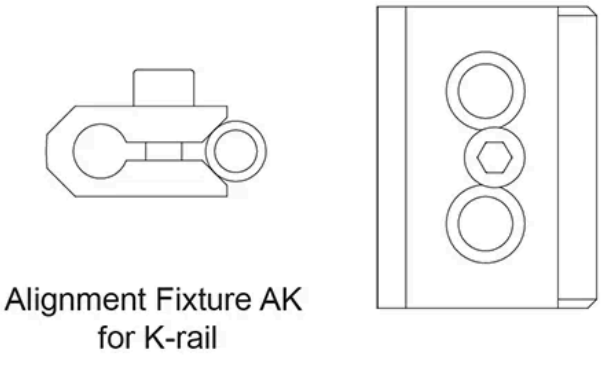

Designation	Size	Compatible with
AT18	18	T- and U-rails
AT28	28	T- and U-rails
AT43	43	T- and U-rails
AT63	63	T- and U-rails
AK43	43	K-rail
AK63	63	K-rail

Every care has been taken to ensure the accuracy of the information in this document, but we take no liability for any errors or omissions. We reserve the right to make changes without prior notice.